SCOSCHE®

VO4148

IN-DASH INSTALLATION KIT
FOR SELECT 2001 VOLVO S80 VEHICLES

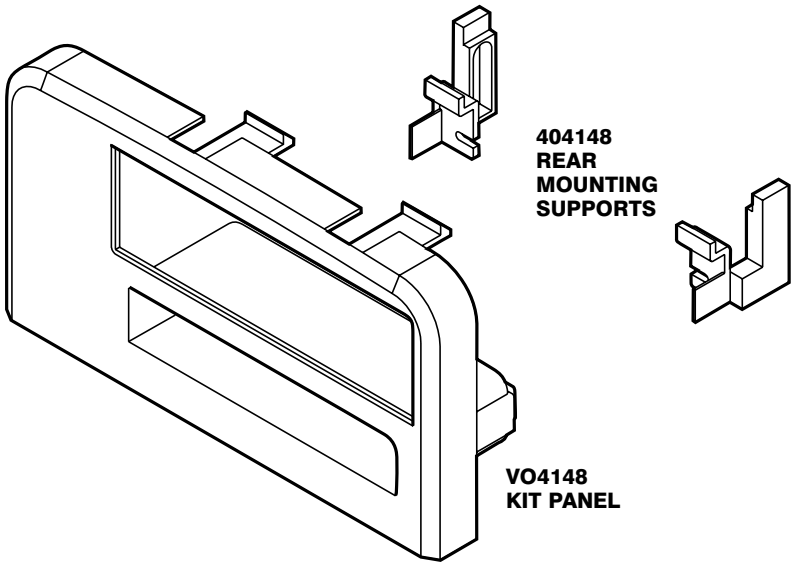

INTRODUCTION / PRELIMINARY

CAUTION:
DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: www.scosche-cars.com

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (VO4148) in Select 2001 Volvo S80 Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

© 2002 SCOSCHE INDUSTRIES, INC.

SI 10/02 - VO4148 (3000003)

VEHICLE DISASSEMBLY

RADIO REMOVAL

1. Carefully pry out and remove small filler piece located below the air conditioning controls and around shifter.
2. Locate and extract (2) T-25 Torx at the bottom of air conditioning assembly.
3. Carefully pry out A/C assembly straight out from each top corner. Be careful as area surrounding is soft.
4. Extract (2) T-25 Torx securing radio bracket, unplug and remove.
5. Extract (5) T-25 Torx screws holding radio to radio mount housing. Remove radio from housing and retain housing. Housing is necessary to mount new radio. (See Kit Assembly Illustration)

KIT ASSEMBLY

KIT ASSEMBLY

1. Unscrew and remove rear mounting supports from kit.
2. Slide kit into metal factory radio housing. (See Radio Removal)
3. Reattach rear mounting supports to secure factory radio housing.
4. When installing kit assembly into dash make sure top of factory radio housing fits snugly to upper radio opening.